


ИНСТРУКЦИЯ ПОЛЬЗОВАТЕЛЯ

USER MANUAL

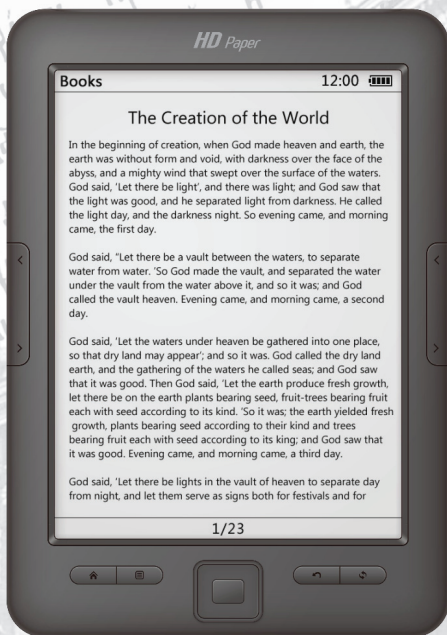

HD Paper

Введение

Мы призваны продолжать улучшать характеристику и качество товара, а также стараемся сохранить корректность и полноту этой инструкции, однако, инструкция может быть изменена без предварительного сообщения, если детали программного обеспечения не соответствуют текущей версии, пожалуйста, используйте это программное обеспечение как стандарт.

Наша компания не может нести какую-либо ответственность за потерю данных, повреждение программного обеспечения, повреждение оборудования в течение длительного хранения и повреждение частного компьютера ввиду поломки, вызванной неправильным его применением со стороны пользователя.

Перед применением этого товара, пожалуйста, внимательно прочитайте эту инструкцию.

Рекомендация:

Если прибор не может включиться при первом применении, пожалуйста, проверьте заряд батарейки, пожалуйста, зарядите, если батарейка плохо заряжена.

Примечания

Пожалуйста, внимательно прочитайте все нижеуказанные сообщения, чтобы избежать ненужных максимальных потерь.

I. Примечания по безопасности


- 1 Прибор не обладает водонепроницаемостью. Пожалуйста, запрещайте использовать его в опасных влажных условиях.
- 2 Никогда не помещайте прибор в место под палящими солнечными лучами, чтобы не сократить срок работы батарейки.
- 3 Никогда не сгибайте дисплейную панель или не ставьте тяжелые предметы на нее, чтобы сохранить экран от раскола.
- 4 Не протирайте прибор химической жидкостью. Пожалуйста, чистите его с использованием мягкой не хлопчатобумажной ткани.
- 5 Не выпускайте из рук, не бейте и не вибрируйте прибором. Потому что сильная вибрация или падение могут привести к повреждению прибора, а грубое обращение с ним может разрушить внутреннюю структуру.
- 6 Не разбирайте прибор лично. Вывести прибор из строя могут не профессиональные люди при его ремонте, а не специалисты нашей фирмы. Гарантийный срок в таком случае не установлен.
- 7 Для обеспечения безопасности полетов убедитесь, что сеть выключена при поднятии в самолет.
- 8 Нормальная рабочая температура дисплейной панели прибора составляет 0-40о С. С превышением такого диапазона эффект дисплея будет хуже.
- 9 Отключите радиосвязь рядом с медицинским прибором, которая может служить препятствием в больницах или здравоохранительных организациях.
- 10 Не размещайте прибор вокруг отопительных приборов, потому что подогрев батарейки может вызвать взрыв.
- 11 Не применяйте прибор, если батарейка повреждена, деформирована, потеряла цвет, перегрелась или плохо пахнет.

II. Примечания относительно товара


- 1 Если считывающее устройство не смогло распознать установленную Т-карточку, пожалуйста, вытяните ее и вставьте снова.
- 2 При считывании Т-карточкой данных, пожалуйста, прекратите вставлять, закрывать или переустанавливать ее.
- 3 Выберите формат FAT при форматировании Т-карточки.
- 4 Прекратите частое сохранение или аннулирование на Т-карточке, чтобы не сократить ее срок эксплуатации.
- 5 Избегайте сильных ударов прибора, статического воздействия или воздействия батареек других приборов.
- 6 Если тяжело выйти из рабочего режима прибора или прекратить его функционирование, пожалуйста, нажмите кнопку RESET для возобновления старта.

Инструкция


Верхняя сторона:



Передняя сторона:

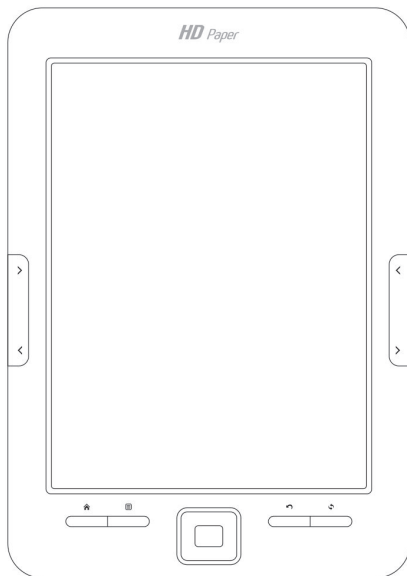

Задняя сторона:

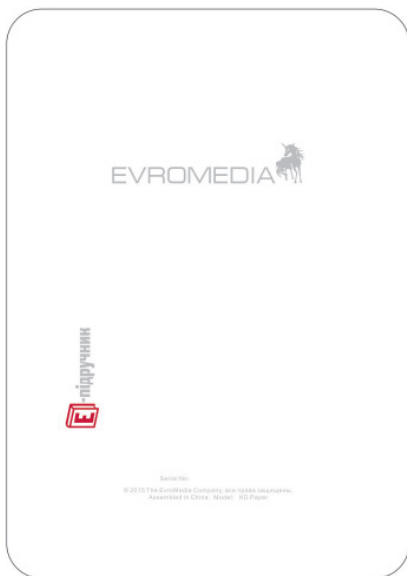

Функции кнопок:

1	E-ink Panel	Зона изображения содержания панели E-ink, как будто дающая возможность читать настоящие газеты
2	Previous Page	Просмотр содержания на предыдущей странице
3	Next Page	Просмотр содержания на следующей странице
4	Home	Возврат к рабочему столу
5	Menu	Дисплей окошка меню
6	Joystick	Рычаг управления вверх и вниз, направо и налево
7	OK	Подтверждение и управление выбранной функцией.
8	BACK	Возврат к предыдущему изображению
9	Refresh	Полное обновление изображения
10	Previous Page	Просмотр содержания на предыдущей странице
11	Next Page	Просмотр содержания на следующей странице
12	Indicator	Индикаторный свет при зарядке и включении / выключении
13	Power	Включено / выключено, краткое нажатие в течение 5 тех. мин. для закрытия и длительное нажатие для включения.
14	USB Port	Соединение с компьютером для передачи файлов или соединение с компьютерной перезарядкой.
15	Earphone port	Соединение с наушниками 3.5мм
16	TF-card Slot	Вставьте TF-карточку в паз
17	Reset	Возврат к повторному старту

Рабочий стол

Основное меню: Текущие данные, Справочник

Функция: новая, книги, изображение, музыка, файловый менеджер, сеть, настройки



Последние данные

Изображение последних данных на основном интерфейсе демонстрирует одну книгу, недавно прочитанную. Кликнув на эту книгу, откроются предыдущие прочитанные страницы для продолжения чтения.

Последние: Кликнув на “последние” на рабочем столе, непосредственно войдете в последнюю прочитанную страницу, что сохраняет последние данные о прочтении. И нажмите кнопку перемещения вверх и вниз, чтобы проверить больше данных о прочтении.

MENU Функции меню



Аннулирование: аннулируйте выбранные изображения.



Аннулировать все: аннулируйте все приведенные записи.




Медиа-плеер: проверьте музыку, воспроизведенную медиа-плеером, и фон.



Выключение: отключите функцию прибора.

Книги

Показанные книги являются сохраненными книгами и файлы в папке документов хранятся в местной памяти и на Т-карточке; интерфейс книг поддерживает данные списка и учетные методы. Учетный метод: если имеются переплеты на книгах, изображение будет осуществляться через них; если наоборот, будут добавлены переплеты по умолчанию, где будут указаны названия книг, форматы и типы. Метод данных списка: типы изображения книг, размеры и время их закладки.

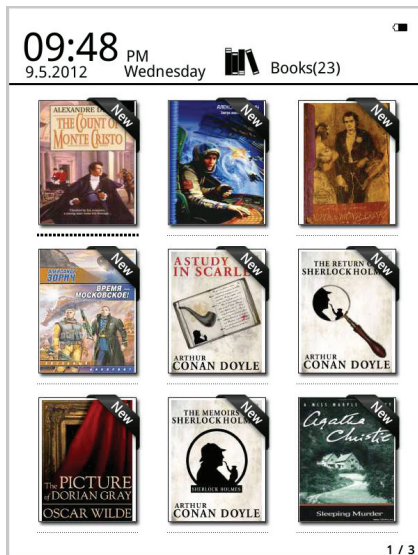

Предупреждающие рекомендации: В данное время поддерживаемые форматы переплета включают FB2, PDF, EPUB. Другие форматы до сих пор не признаны и применяются лишь в переплетах по умолчанию.

Функции меню моих книг



Поиск: Поиск всех файлов и папок на контенте. Поддержка поиска названия папки и поиск индекса. Результат поиска выхода с помощью задней кнопки.



Путь к странице: в этом меню переверните страницу, переход будет осуществляться непосредственно к указанным страницам.



Аннулирование: аннулируйте выбранные изображения.



Режим учета и списка: измените режим Мои книги в изображение метода учета или списка.



Сортировка: поддерживайте сортировку по названию, размеру или типу файла, времени формированию, а также по уменьшению и увеличению. Сортировка по умолчанию осуществляется по названию и увеличению файла.



Качества: качества проверки выбранных изображений. Информация содержит название, размер, тип файла, путь и время его формирования.



Медиа-плеер: Вы можете включить медиа-плеер, чтобы выбрать или остановить играющую музыку.

Чтение

Прибор поддерживает нижеуказанные форматы: TXT, EPUB, PDF, FB2, HTML, HTM, PDB, RTF, MOBI, DJVU, DJV, CHM, RAR, ZIP, DOC

Интерфейс для чтения:

it my first duty to have done so had I not been barred by a positive prohibition from his own lips, which was only withdrawn upon the third of last month.

It can be imagined that my close intimacy with Sherlock Holmes had interested me deeply in crime, and that after his disappearance I never failed to read with care the various problems which came before the public, and I even attempted more than once for my own private satisfaction to employ his methods in their solution, though with indifferent success. There was none, however, which appealed to me like this tragedy of Ronald Adair. As I read the evidence at the inquest, which led up to a verdict of wilful murder against some person or persons unknown, I realised more clearly than I had ever done the loss which the community had sustained by the death of Sherlock Holmes. There were points about this strange business which would, I was sure, have specially appealed to him, and the efforts of the police would have been supplemented, or more probably anticipated, by the trained observation and the alert mind of the first criminal agent in Europe. All day as I drove upon my round I turned over the case in my mind, and found no explanation which appeared to me to be adequate. At the risk of telling a twice-told tale I will recapitulate the facts as they were known to the public at the conclusion of the inquest.


The Honourable Ronald Adair was the second son of the Earl of Maynooth, at that time Governor of one of the Australian Colonies. Adair's mother had returned from Australia to undergo the operation for cataract, and she, her son Ronald, and her daughter Hilda were living together at 427, Park Lane. The youth moved in the best society, had, so far as was known, no enemies, and no particular vices. He had been engaged to Miss Edith


5/264


Интерфейс для чтения указывает на коэффициент скорости чтения, общее количество страниц и текущую страницу чтения. Все прочитанные книги могут записывать последние прочитанные страницы после закрытия и открытия прибора. Применяйте кнопки для переворачивания прочитанных страниц.

Рекомендации по уменьшению оптической плотности изображения: количество страниц может быть показано не сразу после открывания книг. Подождите немного, чтобы посчитать количество страниц. Чем больше содержание книги, тем больше времени занимает ее изображение.

Исключительные функции интерфейса чтения:


Добавление комментария: передвигайте управляющую клавишу на интерфейсе чтения до появления курсора. Передвигайте курсор до выбранных мест  и нажмите ОК для сохранения в данный момент выбранных изображений, и в то же время содержание будет подчеркнуто.


Перевод: передвигайте управляющую клавишу на интерфейсе чтения до появления курсора. Передвигайте курсор до мест перевода, чтобы осуществить выбор слов. Затем нажмите ОК для вызова запросного окна , чтобы оно показало соответствующее содержание перевода.


Добавление памяти: передвигайте управляющую клавишу на интерфейсе чтения до появления курсора. Передвигайте курсор до выбранного знака  и нажмите ОК для сохранения в данный момент выбранных изображений, и в то же время содержание будет подчеркнуто.


Примечание: применяйте управляющую клавиши shift+ вверх и вниз, чтобы выбрать примечания, и проверьте путем нажатия клавиши ОК.

Функции меню чтения

 **Переход на страницу:** переход на первую страницу, последнюю страницу, к контенту (лишь контент, включенный в книгу) и к указанным страницам.

 **Поиск:** введите основные слова и нажмите подтвердить, что они могут быть введены, выбранный контент будет отображен посредством черного-белого инверсного знака.

 **Установка страницы:** Вы можете настроить размер букв, масштаб изображения, интервал строки, края, семью шрифтов.

 **Добавление книжных пометок:** Добавьте книжные пометки для текущих страниц для чтения, и изображения книжных пометок появятся в верхнем углу страницы.



Проверка книжных пометок и аннотаций: интерфейс книжных пометок и аннотаций успешно демонстрирует добавленные книжные пометки и аннотации. Нажмите левую и правую кнопку передвижения для изменения интерфейса списка книжных пометок и аннотаций. Функция меню поддерживает отдельное удаление и полное удаление.



Открытие и закрытие системы регистрации транзакций TTS: Откройте и закройте систему регистрации транзакций TTS. Соответствующие настройки TTS могут последовать инструкциям по настройке чтения.



Открытие и закрытие автоматического переворачивания: Откройте и закройте автоматическое переворачивание. Соответствующие настройки автоматического переворачивания могут последовать инструкциям по настройке чтения.



Вращение: выберите правильное направление, которое Вы хотите, затем нажмите ок.



Настройки чтения: установите текущее чтение по языкам, скорости и объему. Текущая поддержка китайского и английского языка.



Настройки автоматического переворачивания: установите автоматическое переворачивание. Блок установлен по секундам.



Свойства книг: проверьте свойства выбранных программ. Информация содержит название файла, его тип и размер, маршрут и время создания.



Игра медиа-плеера: проверьте музыку, произведенную медиа-плеером, и фон.

Изображение

Нижеуказанные формат и комическое изображение этого прибора: JPG, BMP, TIF, PNG, GIF



Мой рисунок показывает рисунки и папки, сохраненные в местной памяти и на Т-карте.

Через тмению Вы можете искать, аннулировать, сортировать, переворачивать страницы и видеть свойства и т.д.

МУЗЫКА

Поддерживаемые форматы:

WAV, WMA, OGG, MP3.

Интерфейс проигрывания музыки:



Музыка, изображенная в программе музыки на основании музыкальных файлов и папок, сохраненных в местной памяти и на Т-карте, откройте музыку для ее выбора и воспроизведите проигрывание или кликните на музыкальный плеер на рабочем столе для проигрывания. Интерфейс музыкального плеера может появиться с помощью клавиши меню на интерфейсе для чтения.

Введение функции музыкального плеера:

На интерфейсе музыкального плеера снова кликните, чтобы включить музыкальный плеер. Пользуйтесь левой и правой кнопкой перемещения,

чтобы воспроизводить предыдущую и следующую песню, и продолжительно нажимайте, чтобы прокручивать вперед и назад; кнопки перемещения вверх и вниз используются для настройки громкости; клавиша Ok – для приостановки проигрывания и воспроизведения проигрывания. На интерфейсе музыкального плеера изображены названия песен, певцов, названия альбомов и прочее. Нажимая на клавишу меню, можно ввести такие настройки методов проигрывания как один цикл, порядок проигрывания, весь цикл и произвольное проигрывание. Чтобы выйти из музыкального плеера или выполнить фоновое проигрывание, пожалуйста, нажмите на заднюю клавишу.

WiFi (опционально в некоторых моделях)

Беспроводный доступ

Включая WIFI, будет осуществляться поиск местного сигнала беспроводной связи wifi, выберите его, введите пароль и начните перемещение по сети, если имеется открытый источник беспроводной связи wifi или раньше включенный, то соединение будет проводиться автоматически.



означает, что источник wifi открыт.



означает, что источник wifi закрыт.

Wifi функции:



Сканирование: осуществите повторное сканирование местного сигнала wifi.



Подсоединение сети: если имеется какой-то записанный пароль wifi, то соединение будет проводиться автоматически.



Забудьте пароль: не запоминайте пароль и не вводите пароль для следующего соединения.



Добавление сети: добавьте сигнал wifi вручную.



Информация сети: демонстрирует подсоединенный адрес IP и MAC.



Отсоединение сети: отсоедините текущий сигнал wifi.

Памятка:

Если не пользоваться в течение 15 минут, то сеть автоматически отсоединится.

Explorer – Проводник

Убедитесь, что сеть подсоединена при пользовании проводником, иначе появится список WIFI для связи и откроется начальная страница Google при подсоединении, нажмите BACK, чтобы уйти с нее.

Explorer меню:



Введение веб-страницы: введите нужную веб-страницу



Обновите веб-страницу: обновите веб-страницу, чтобы получить новую информацию;



Добавление книжной закладки: добавьте текущую веб-страницу в качестве книжной закладки, но нельзя добавить такую же веб-страницу.



Список книжных закладок: просмотрите книжные закладки, выберите и откройте непосредственно веб-страницу



Настройка: в(ы)ключает из-рабочего-режима/в-рабочий-режим файлы cookie, из-рабочего-режима/в-рабочий-режим JavaScript, из-рабочего-режима/в-рабочий-режим обнаружение кода, из-рабочего-режима/в-рабочий-режим штепсельную вилку, из-рабочего-режима/в-рабочий-режим просмотр рисунков;



Увеличение: увеличьте веб-страницу.



Уменьшение: уменьшите веб-страницу.



Полный экран: просмотрите веб-страницу в полный экран.



Начальное положение: возврат к начальному положению страницы Google.

Файловый менеджер

Проверьте все файлы и папки в местной памяти и на Т-карте на основании этой программы, а именно Документы, Музыка, Рисунки, Память. Если на приборе нет никаких папок, пожалуйста, создайте вручную названия папок или перезагрузите прибор. К тому же, интерфейсы программ отвечают под-папкам, поддерживающим Документы, Музыку, Рисунки.

Документы: при осуществлении поиска книжных форматов в папке Мои книги пользователи должны сохранить книги в эту папку.

Музыка: чтобы воспроизводить музыку непосредственно в папке Моя музыка или чтобы музыкальный плеер находился на рабочем столе, пользователи должны сохранить музыку в эту папку.

Рисунки: чтобы просматривать рисунки в папке Мои рисунки, пожалуйста, сохраните рисунки в этой папке.

Память: сохраните новые созданные записи в памяти.

Настройки

1 Настройки шрифта

Пять шрифтов можно демонстрировать по умолчанию. Кроме того, пользователи могут скопировать необходимые шрифты в папку шрифтов, чтобы установить новый шрифт. Выключите и включите, затем новые установленные шрифты могут быть изображаться в настройках шрифтов.

2 Настройки даты и времени

Проверьте год, месяц, дату, часы и минуты с помощью этой функции. Нажмите левую и правую кнопку передвижения, чтобы настроить данные после выбора изображенных пиктограмм. Нажмите кнопку возврата, чтобы сохранить и выйти.

Есть на выбор 12-часовая и 24-часовая системы.

Электронная книга Ebook соединит сеть и синхронизирует сетевое время при выборе сетевого времени.

3 Вспомогательные настройки по времени

Выберите вспомогательные настройки по времени 1 мин., 3 мин., 5 мин., 10 мин..

4 Настройки резервных рисунков

В этой опции установите настройки резервных рисунков. Рисунки по умолчанию могут быть выбраны по одному или по два. После установки настроек резервных рисунков на интерфейсе просмотра

все установленные рисунки будут находиться в нижеуказанном списке, которые могут устанавливаться по выбору. Пользователи могут также кликнуть на пиктограмму Выбрать все, чтобы выбрать все резервные рисунки, которые будут меняться поочередно с выбором каждого резервного времени.

5 WiFi настройки

Соединяйте, отсоединяйте, забудьте сеть и создавайте новую сеть вручную.

6 DRM – Система управления цифровыми правами

Введите учетную запись реестра Adobe DRM и пароль, чтобы перейти к активации.

7 Привилегия

Для экрана обновите настройки, настройки сигнализации и восстановите заводские настройки.

8 Настройки языка

Измените нужный Вам язык, эта электронная книга имеет более 100 языков, и запустите рабочий режим.

9 Информационная система

Просмотрите версию PCBA, SN, карту памяти и информационную карту (sd card info).

10 Восстановление заводских настроек

Восстановите заводские настройки по умолчанию, предыдущие настройки сотрутся. Пожалуйста, будьте внимательны при выборе. Перезагрузка осуществится автоматически после восстановления заводских настроек.

11 Инструкция

Представлено подробное описание функционирования прибора. Пользователи могут воспользоваться инструкцией для управления и пользования соответствующими функциями.

6 inch E-Ink User manual

1. Note

This product is a precision electronic products, Please pay special attention to:

- 1) Do not disassemble the Machine, If you have any questions please contact the dealer;
- 2) Use away from the electromagnetic environment;
- 3) Careful not to pressure or squeezing of this product in the store or carry;
- 4) Please store or carry away from the humid environment, this product should not be exposed to dripping or splashing;
- 5) Please do not use water or other chemical agents to clean the books, with a soft cloth to clean eBook surface;
- 6) Please do not force the e-book button;
- 7) Please do not in direct sunlight, away from the low and high temperature environments;
- 8) Please do not severe vibration or high impact e-books, and to avoid falls and other accidents;
- 9) In order to protect the hearing, please do not turn up the volume too high (the doctor pointed out that the prolonged use of larger volume listening can damage the hearing of the listener). Please Reduce volume or discontinue When Tinnitus;
- 10) Please pay attention to the tips marked on the product when insert the expansion card, Do not plug in wrong direction or too much effort to insert, so as not to damage the slot;
- 11) The machine maybe hot if connect with computer long time by USB cable, it is recommended not connected to the computer for a long time, when not in use, unplug from the USB interface.
- 12) Do not use or store the product in high temperature, damp, dusty areas, it may affect the product life
- 13) Please do not disconnect E-book when upload and download files, This could cause file damage
- 14) Maybe not do further notice if changes performance and functionality of product, please understand!
- 15) When the machine use as a mobile HDD, Please save and read the file in a correct way, otherwise the files maybe missing, the Company is not responsible for it;

- 16) Please «Defrag» the e-book on a regular basis; Please connect the E book with PC via USB cable, using the windows operating system to format it; (formatting will erase all the existing data, so please backup the data before formatting);
- 17) Memory capacity displayed maybe different with the standard capacity Due to the E-book system firmware and Flash occupy a certain space and the capacity calculation is different, so this is normal;
- 18) Please strengthen the Viruses prevention, or the e-book firmware and files will be damaged; If the E-book can not work due to the viral infections, please upgrade the firmware in a computer (the computer must without viral infections), and then format the disk;
- 19) The Company does not responsible for the data lost caused by product damaged, repair or other reasons;
- 20) Please follow the user manual and back up important data in time;
- 21) Do not use the product in the electronic devices prohibited region;
- 22) Attention for charging battery:
 - a) The battery used in this e-book is a lithium polymer battery, can be rechargeable use; Please charge more than 8 hours in the first few times, and the battery should be run out of power before recharging, It can extend the battery life;
 - b) Please charge more half an hour after fully charged to ensure a longer playing time;
 - c) The user should not replace the Lithium Battery, it should be replace by customer service staff with same type or equivalent type of battery;
 - d) Battery life may vary with the use conditions and manufacture date.
- 23) two charging ways:
 - a) Charge via USB port: the ebook can be charged regardless of boot or not as long as the e-book connected to the computer;
 - b) Compatible charger (adapter) ---- recommended.

The charger and e-books is warming when charging, It is a normal phenomenon.

The actual use may be some difference with the manual due to software upgrade, the operating guide for reference only. (The E-book is non-waterproof).

The company reserves the right to improve the product such as specifications and design, subject to change, without notice!



2. Supplied Accessories

E-book reader	1
Cloth cover.....	1
USB cable.....	1
Headphones.....	1
Instructions.....	1

Note: Accessories for prevail in kind


3. E-ink features

- 1) A. Eye Protection: can be read long time, flicker-free, zoom freely, no hurt the eyes enjoy reading.
- 2) Can be easy read in sunlight: With the technology of electronic ink and electronic paper display, no reflect in the sunlight, allowing you to fully experience the fun of outdoor reading.
- 3) No Radiation: Keep your body safety
- 4) Full visual angle to read: high-definition, close to the paper display, reading angle close to 180°.
- 5) Ultra-low power consumption: more than 9000 continuous pages with unique intelligent power management technology.

4. Features Overview



- 1) Support formats: TXT, PDF, EPUB, HTM / HTML, FB2, ZIP, etc.;
- 2) Supports MP3, WMA variety of music format, external speakers play
- 3) Adopt 6.0 inch E-INK e-paper, reading comfortable, non-reflective;
- 4) Support Memory card;
(Note: currently many different types and different capacity memory card in the market, Please note that the TF card more than 4GB capacity and Class4 specifications is best chose)
- 5) Support listening music when reading e-book, bookmark function;
- 6) Data transfer via USB2.0;

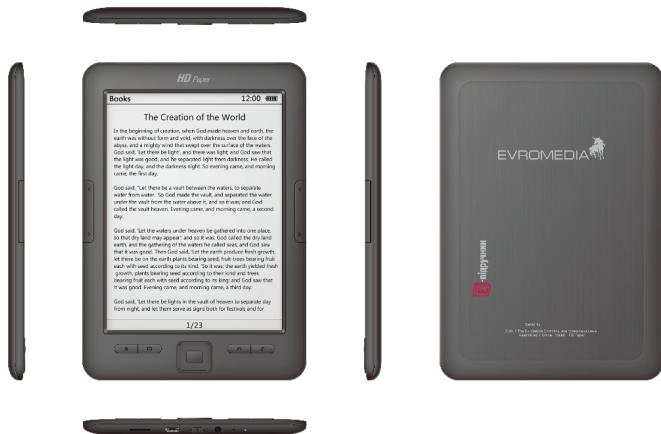5. function diagram:





Definition of Buttons

- 1) : when reading novel, Zoom in and out the font;
- 2) button: if the button is pressed, it will return to the last catalog. If it is pressed in any interface, it will return to the main menu interface;
- 3) Direction keys: up, down, left and right function buttons;
when playing music,
up button: volume+;
down button: volume-;
left buttons: if pressed shortly, the last song will be returned; if pressed for long time, it means fast backward; right button: if pressed shortly, the next song will be played; if pressed for long time, it means fast forward; when skimming through E-book: page up and page down;
- 4) OK: confirm, play/ pause keys, when skimming through E-book, the menu pops up; when playing music, stop playing music; if it pressed again, the music is played initially;
- 5) button: it can return to the interface after operation in any interface;
- 6) : used for switching horizontal and vertical screen of character when reading novel files;

- 7) Power switch: dial to  for about 5 seconds, this product will be turned on or off;
- 8) Lock key: dial the power switch to , the button will be locked; if the power switch is dialed to the middle position, the lock will be unlocked.
- 9) Earphone: earphone interface;
- 10) TF card slot: this product could support TF card expansion;
- 11) USB interface: through USB line, this product can be connected to the computer;
- 12) Reset button: when the machine does not react for a long time, it is used for resetting.

6. Basic operations

1) Startup

After the power switch is pushed to  for about 5 seconds, the system will start automatically. It will enter into the startup picture after the screen flashes. To power off, the system will be powered off, after the power switch is pushed to  for about 5 seconds.

2) Volume adjustment

When playing music, you can adjust the volume through shortly press up button and down button

3) Fast forward, fast backward

In the state of playing music, pressing long time of the fast forward (right button) and long time of backward buttons (left button) for fast forward and backward.

4) Last file, next file

In the state of playing music and browsing pictures, you can press the left and right buttons to switch to the last or the next file

5) Connecting computer or file

Through USB connecting line, connect the product with computer. In this way, the removable disk function can be realized to transmit data. The product can be connected with the computer through USB interface. It can be used a U disk. You only need to copy files including your favorite novels and music to the product, which is not to be realized by using any third party programs.

6) Reset

When the machine does not react for a long time, it can recover after startup again through pressing the reset button for a long time.

7. Instructions

After startup, it will enter into the main interface. Through pressing Direction keys, the cyclic options can be made among those functions including "Recently", "My book", "Music", "Photo", "Explorer", "Calendar", "Setting", and "User Manual".

1) Recently

In the interface, select "Recently" model, and then press OK button to enter into the recent reading list and shortly press return key to exit the recent reading model.

Notes: in the recent reading list, only the 10 books or picture read recently only can be displayed.

2) My Book

Enter into the My book model and select "My book" model in the main interface, and then press OK button to enter into the E-bookcase list;
File selection and reading

Press "up and down buttons" to select files. After selecting one option, press "OK" button to enter into the E-book reading; shortly press return key to exit reading model and return to the E-book list.

3) File reading

When reading E-book, you can perform the following operations:

a) Zoom in and out the font

b) Switch horizontal or vertical screen of E-book;

When switching the horizontal screen, press the left and right buttons to turn page up and down;

When switching the vertical screen, press the left and right buttons to turn page up and down;

c) OK button: Press OK button to enter into the function menu model interface of text browsing state: in PDF browsing interface, the function menu model interface is added with white edge cutting and automatic typesetting function options.

d) Save bookmark

Shortly press "OK" button, and press "M" button, select "Add mark" then press "OK" button, the current page will be saved as bookmark. Five bookmarks can be saved at most for each file, Shortly press the return key to exit.

e) Read bookmark









Shortly press "OK" button, and press "M" button, select "Get Mark" then press "OK" button, the bookmark will be displayed. To select the bookmark to read, shortly press OK button. Shortly press return key to exit.



f) Jump page

shortly press "OK" button, and press "M" button, select "Go to page", then press "OK" button, a blank space for input page number will be displayed. Through up and down buttons, the page to jump can be selected by input number. It will be invalid if the figure exceeding max page figure is input, press OK button, it could jump to the required page. Shortly press return key to exit.

g) Notes:

- (1) DOC, HTM/HTML, PDF and CHM files, press   button to zoom in and out or press screen switch button   to switch into horizontal screen. When reading the E-book by turning page down, the system will browse and read the amplified pages up and down. When reading the last page of the current page number, the page down turning system will jump to the next page. The reading method of the next page is as same as that of the last page; therefore, when the font is amplified or the screen is switched into the horizontal screen, the total pages of the file are not changed. It is normal.
- (2) As for PDF files, when the press   button to zoom in and out or press screen switch button   to switch into horizontal screen., the system can not display all parts of the reading file in full screen. It is necessary to move to read the file completely; after the file is amplified, press up, down, left and right buttons to move the file or press OK button to start white edge cutting model or automatic typesetting. At this time, the full-screen browsing can be realized.
- (3) The loading time is different according the size of file, The larger size of the file the longer loading time. Please wait patiently.
- (4) The time for turning pages up and down might be longer if the file in-build pictures, Please wait patiently. (Notes: when the file is too large, the partial pictures can not be displayed.)
- (5) To read and manage books conveniently, it is advised to use 2-3 and directory structure to classify your contents. Do not use too long or the directory structure and file name with special characters. Otherwise, the system may not identify the special and nonstandard directory and file name.

4) Music

- a) Enter into the music play model

In the main interface, select "Music" and then press the OK button to enter into the music play list;

- b) In the music play interface:

A. play music: play the selected music; press "OK" button to stop and play music;

B. Playing mode: the machine default is sequence cyclical play. pressing "M" button when play music then you can see "Play mode" and "set EQ", select "Play mode" it will show "Only once, Rotate one, Rotate all, Sequential, Random" total five option, you can select it;

- c) When listening to the music, the volume can be tuned up or down by pressing volume +/- buttons (up and down button);

- d) When listening to the music, by shortly pressing the last (left Ok button) or the next song (right OK button), the last or the next song can be played.

- e) When listening to the music, by pressing the fast forward (right button) and backward buttons (left button) for a long time, the songs can be played fast forward and backward.

- f) When listening to the music, by shortly pressing Play/Pause buttons (ok button) to have music played and paused.

Notes: to reduce power consumption, The screen refreshed every 5 seconds in the music play. This is normal phenomenon.

5) picture browsing

- a) Enter into the picture browsing model

Select "Photo" mode in the main interface, and then press OK button to enter into the picture file list;

- b) Picture selection and browsing.

After entering into the picture browsing list, shortly press up and down buttons to select files. shortly press up button to select last one picture and shortly press down button to select next one picture; shortly press return key to return to the picture list state.

6) System setting

- (a) Enter into system setting model

Select "Setting" model in the main interface, and then press OK button to enter into the system setting list;

- (b) System setting list



After entering into the system setting list, there will be options including: "language", "Set time", "Auto off", "Clear history", "Restore Default", System information.

- A System information: display Model, Soft version, Memory size, and issue date;
- B Restore Default: through this option, the system can recover the ex-factory state;
- C Set Auto off time: through this option, the user could set auto power off time according to his habit;
- D Set language: through this option, the machine's language can be set autonomously.
- E Clear history: through this option, the history will be cleared;
- F Set time: through pressing left and right buttons, year, month, date, hour, minute and second positions can be selected. Through up and down direction buttons, the figures can be selected;

7) Calendar

Select "calendar" model in the main interface, and then press OK button to enter into calendar browsing interface. By pressing the direction buttons, the calendar can be viewed.

8. Instructions for battery and power supply functions

- 1 If the machine enters into the charging state, the charging icon  will automatically show up in the right upper position. After charging saturation, the icon will be automatically switched back into full battery icon .
- 2 When the battery is empty and the voltage of the machine is too low, the system will prompt the user to charge battery immediately;
- 3 When you charge the product for the first time. To have the best use state of the battery, you are advised to charge it more than 8 hours under the circumstance of power off.
- 4 Before using the new product, it is necessary to charge and release it full for three times for battery activated; to charge it later, the batter can be charged full completely in about 2.5-3 hours; under the circumstance of startup, it will take long charging time.
- 5 advise the user to have the product charged and released full at least once every 3 months in order to maintain a good performance of battery.
- 6 after charging the battery full, please remove the USB line, and then remove the charger in the power socket. Please do not insert the charger into the power socket when you do not charge the E-book

- 7 If not used for a long time, Please keep the battery in full charged, and the battery should be charged full and released at least once every three times.
- 8 Please use the E-book after charging full. When the battery is completely empty, please do not connect the computer unless the E-book is charge full; please charge the battery in the following circumstances:
 - A. battery's electric quantity icon displays there is no electric quantity
 - B. system is powered off automatically, and powered off quickly after startup
 - C. The operation button does not have reactions
 - D. To ensure the charging stability, Please do not use the USB of computer to charging but select the standard charger (adapter) to charge battery.

9. Trouble shooting

- 1 The E-book can not be run?
Reply: To connect USB or charger, check whether the battery voltage is too low. If yes, please use it after charging for a period of time. If the machine still fails to start after charged full, please contact our service personnel.
- 2 No sound in the headset?
Reply: please check whether the volume is set as 0. Please check whether there is something wrong with the connection of headset.
- 3 Button not work?
Reply: please check whether the OK button is locked. If "yes", please unlock the button and then try it again.
- 4 Serious noise?
Reply: please check whether the Headphones plug is clean. The impurities may result into the noise. Check whether the music file is damaged. Try to play other music files to make sure. If the file has been damaged, the serious noise may be happen.
- 5 The file can not be download?
Reply: check whether the computer is connected with reader correctly. Check whether the storage space of the memory has been full; Check whether the USB line is damaged.
- 6 How to solve the phenomenon that the reader is Crashed?
Reply: if the system is crashed during operation, please press the reset button to restart.
To prevent the system from being crashed, please do not press the button

too fast and it is advised to operate one by one. On the other hand, in case of inadequate electric quantity of battery, please charge it promptly.

7 Why there is certain difference in use time of reader sometimes?

Reply: the service life of the polymer lithium battery will be different according to the ambient environment and operating condition. When operating the E-book, if the ambient environment is too high or low, the service life of battery will also be influenced. Advised to use the machine under the normal temperature! From the perspective of using condition, due to the influences of amplified volume, frequent operations and startup and power-off and other factors, there will also be certain differences in actual operating time.

10. Basic Specifications

Category	Item	Description
Port	Port mode	Mini USB
	Multithreading support	Support
Storage	Medium	Flash
	Capacity	8GB
	Expansion storage	TF1-16GB
	Supported file systems	FAT16/FAT32
Screen	Dimensions	E-INK 6 inch
	Screen material	E-INK
	Operating mode	Press button
Music format	MP3: MPEG1/2/2.5 Audio Layer 3 Bit rate: 64Kbps~320Kbps Sampling rate: 8-48KHz WMA (WMA1.WMA2)	

File format	TXT, HTM, HTML, FB2, EPUB, PDF, CHM, ZIP	
speaker	Support	built in speaker
Picture	Supported formats	JPG, JPEG, BMP (support 24-bit), GIF (static status display)
	Supported resolution ratio	4000*3000
Battery	Type	Lithium battery 2000mAh
	Audio playing time	7.5 hours (headset monitoring/ volume 15)
	E-book page turning	More than 9000 times
	Charging time	2.5-3 hours
	Specification	5V-1A
Language	Supported languages	Simplified Chinese, English, Russian, Spanish, German, Italian, Japanese and Korean, etc.
Operating temperature	0° ~ +40°	

Playing time description:

The playing time mentioned in this manual indicates that the headset monitoring/volume is 15 and MP3 music bit rate is 128 kbps under the permissible operating temperature of the product. Due to the difference in operating environment, the actual playing time might be different from the standard playing time. Please understand!

EvroMedia

ГАРАНТИЙНИЙ ТАЛОН

Модель №	Дата покупки:	
Серийный номер:	Имя и адрес Покупателя:	
Наименование и юридический адрес продавца:	Подпись продавца:	Печать продавца:

ТАБЛИЦА ГАРАНТИЙНОГО РЕМОНТА


Номер гарантийного ремонта	Дата принятия аппарата в ремонт	Дата выполнения ремонта	Описание ремонта	Список замененных деталей	Название и печать сервисного центра	Имя мастера, который выполнял ремонт

Данная таблица заполняется представителем уполномоченной организации или обслуживающим центром, который проводит ремонт изделия. После проведения гарантийного ремонта данный талон должен быть возвращен Собственнику.

Сервисная поддержка:

ООО «Оргтехника» г. Киев, проспект Героев Сталинграда, дом 4, корпус 1, офис 5
тел. (044) 581-02-02 (доп. 114), www.evromedia.eu, remont@org.net.ua

EVROMEDIA зарегистрованная торговая марка

 підручник зарегистрований торговий знак

UPC: 6559584479763